

Rack Installation of Barracuda Networks Appliances

<https://campus.barracuda.com/doc/41114636/>

Find your Barracuda Networks product below for rack mounting instructions, if applicable.

Model	Form Factor	Rack Mounting Instructions by Chassis
<i>Barracuda Backup</i>		
190/295	Desktop	No rack mounting required
290	Rack mountable - 1U Micro	1U Chassis Rack (Four Screw) Mounting Instructions
390	Rack mountable - 1U Mini	1U Chassis Rack (Four Screw) Mounting Instructions
490/690	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions
790/890	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
895/990/991/995	Rack mountable - 3U	3U 16 Bay Chassis Rack Mounting Instructions
1090/1091	Rack mountable - 4U	4U 36 Bay Chassis Rack Mounting Instructions
<i>Barracuda Encrypted Backup</i>		
6090	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions
8090	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
9090	Rack mountable - 3U	3U 16 Bay Chassis Rack Mounting Instructions
10090	Rack mountable - 4U	4U 36 Bay Chassis Rack Mounting Instructions
<i>Barracuda Link Balancer</i>		
230/330/430	Rack mountable - 1U Mini	1U Chassis Rack (Four Screw) Mounting Instructions
<i>Barracuda Load Balancer ADC</i>		
240/340/440/540/640/641/642	Rack mountable - 1U	1U Chassis Rack (Four Screw) Mounting Instructions
840/841/842	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
<i>Barracuda Message Archiver</i>		
150	Rack mountable - 1U	1U Chassis Rack (Four Screw) Mounting Instructions
350/450/650	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions

850	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
950	Rack mountable - 3U	3U 16 Bay Chassis Rack Mounting Instructions
1050	Rack mountable - 4U	4U 36 Bay Chassis Rack Mounting Instructions
Barracuda Email Security Gateway		
100/200/300/400	Rack mountable - 1U Mini	1U Chassis Rack (Four Screw) Mounting Instructions
600	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions
800/900/1000	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
Barracuda Web Application Firewall		
360/460	Rack mountable - 1U Mini	1U Chassis Rack (Four Screw) Mounting Instructions
660	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions
860/861/862/960	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
Barracuda Web Security Gateway		
210	Desktop	<i>No rack mounting required</i>
310/410	Rack mountable - 1U Mini	1U Chassis Rack (Four Screw) Mounting Instructions
610	Rack mountable - 1U	1U Chassis Rack (Two Screw) Mounting Instructions
810/910/1010/1011	Rack mountable - 2U	2U 8 Bay Chassis Rack Mounting Instructions
Barracuda CloudGen Firewall		
F12 Rev. A		Rack Mount Brackets (optional)
F18 Rev. B		Rack Mount Brackets (optional)
F80 Rev. B		Rack Mount Brackets (optional)
F82 DSL Rev A.		Rack Mount Brackets included
F93 Rugged Rev. A		DIN Rail Mount Brackets included
F180 Rev. A		Rack Mount Brackets included
F183 Rev. A		Rack Mount Brackets included
F183R Rev. A		DIN Rail Mount Brackets included
F280 Rev. B		Rack Mount Brackets included
F380 Rev. B		Rack Installation (optional)
F400 Rev. C		Rack Installation (optional)
F400.20 Rev. C		Rack Installation (optional)
F600 C10 Rev. D		Rack Installation (optional)

F600 C20 Rev. D	Rack Installation (optional)
F600 F10 Rev. D	Rack Installation (optional)
F600 F20 Rev. D	Rack Installation (optional)
F600 E20 Rev. D	Rack Installation (optional)
F800 Rev. C	Rack Installation
F900 Rev. A	Rack Installation
F900 Rev. B	Rack Installation
F1000 Rev. A	Rack Installation
Barracuda CloudGen WAN	
T100	Rack Mount Brackets (optional)
T200	Rack Mount Brackets included
T400	Rack Installation (optional)
T600	Rack Installation (optional)
T900	Rack Installation

© Barracuda Networks Inc., 2022 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.