

Barracuda NG Firewall F280 Revision A

<https://campus.barracuda.com/doc/41116455/>



Default Port Configuration

Label	OS Notation	Speed/Type	Management Port
PORT1	port1	10/100/1000 MBit RJ45	X
PORT2	port2	10/100/1000 MBit RJ45	
PORT3	port3	10/100/1000 MBit RJ45	
PORT4	port4	10/100/1000 MBit RJ45	

Hardware Specifications

Opening your Barracuda Networks appliance or removing its warranty label unless instructed to do so by Barracuda Networks support will void your warranty and hardware support. [Barracuda Networks Appliance Safety Instructions](#)

Always use the power supply shipped with the appliance.

Component	Specifications
CPU	Intel Dual Core
Memory	4 GB
Mass Storage	80 GB SSD
Flash Disk	-
LCD Module	-

USB	2x USB 2.0
L-Shape rack mount bracket	Included in packaging
Wall mount bracket	Included in packaging
Form Factor	Desktop
Dimensions (W/D/H)	272 x 195 x 44 mm 10.7 x 7.7 x 1.8 in
Weight appliance	2,3 kg / 5.1 lbs
Power Supply	Single, internal
Power Supply Input Voltage	100 - 240 V, AC
Power Supply Output Voltage	12 V, DC
Power Supply Voltage	47 Hz - 63 Hz
Power Supply Watts	45 W
Storage Temperature	-20 °C to +70 °C
Operation Temperature	0 °C to +40 °C
Relative Humidity	5% - 95%, non-condensing
Certifications	CE, FCC, ROHS
WiFi	802.11 b/g/n up to 150 Mbps single antenna extended range

The hardware configuration list in Table 1 was valid at the time this manual was published. The listed components are subject to change at any time, as Barracuda Networks may change hardware components due to technological progress. Therefore, the list may not reflect the current hardware configuration of the Barracuda Networks NG Firewall or NG Control Center appliance it was delivered with.

Status LEDs and Acoustic Signals

Your appliance is equipped with a variety of LEDs and acoustic signals. On the front of the Barracuda NG Firewall F280 are 4 LEDs indicating connected network port link connections, one power LED, and one disc LED. On the back side of the unit is a power button with included LED.

Color	Glowing State	Meaning
All LEDs	Off	Appliance is powered off or installation has not initialized far enough for LED control when installation is started.
Power LED on the front is blue Power LED on the back is blue	Steady	Unit is plugged in and powered on

Power LED on the back is red	Steady	Unit is plugged in but powered off
Disc LED on the front is blue	Blinking	Unit is reading/writing to the storage system
Port LED on the front is green	Blinking	Port is in use (Data transfer)
Port LED on the back	Left blinking Right steady	Port is in use (Data transfer) Port is on
Acoustic Signal	Frequency	Meaning Installation
Beep	1 time	Unit starts booting
Beep	3 times	Installation is completed successfully and appliance is halted for reboot. After reboot, one beep indicates booting.

Serial Console Port

In order to establish a console connection to the appliance using a serial cable (RJ45), you need to configure the serial port on the terminal using the following parameters:

Parameter	Value
Baud	19200
Bits	8
Stop bit	1
Parity	None
Handshake	None

Figures

1. F280_2014.png

© Barracuda Networks Inc., 2019 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.