

Hardware

<https://campus.barracuda.com/doc/43847094/>

The Barracuda NG Firewall is available in multiple hardware models to meet different networking requirements, ranging from the Barracuda NG Firewall F10 for small or home offices to the Barracuda NG Firewall F1000 for large data centers.

Step 1. (Optional) Install the NG Firewall or NG Control Center in a Rack

Some Barracuda NG systems are desktop sized, the larger models can be mounted in a standard size racks.

For more information, see [Rack Installation for Barracuda Appliances](#).

Step 2. Management Ports

The management port for the Barracuda NG Firewall differs depending on the model. Connect the management port to the network the management PC is in.

Hardware System	Management Port	WAN Port
Barracuda NG Firewall F10 - F30x	Port 1	Port 4
Barracuda NG Firewall F400 - F600	Port 1	-
Barracuda NG Firewall F800	MGMT port	-
Barracuda NG Firewall F900	MGMT port	-
Barracuda NG Firewall F1000	MGMT port	-

Step 3. Complete the Quick Start Guide

Every Barracuda NG Firewall or NG Control Center appliance is shipped with the [Quick Start Guide](#). Complete all the steps listed in the Quickstart Guide for the **Standard Deployment Mode**.

Next Steps

To start log-in and configuration of your Barracuda NG, see [Getting Started](#).

© Barracuda Networks Inc., 2019 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.