



How to set a Fallback Configuration

To safeguard against misconfigurations, a fallback configuration can be set by the admin for each Secure Connector (FSC). This fallback configuration replaces the active configuration when the hardware reset button on the FSC is pressed. If the fallback configuration is invalid, the FSC is reset to the factory default settings.

Set a fallback configuration

1. Go to **your FSC-Series cluster > Cluster Settings > Secure Connector Editor**.
2. In the **SC-List**, right-click the FSC and click **Create Fallback Configuration**.

ID	Name	Template	Release	Country	Unit	Description	VPN Mode
4	SC1	-	1.0	Austria	Information Development		Operative
6	MG75			Austria	Your Division		Operative
8	vofxsc1			Germany	PMM TME MFA	Box Felix FFM	Operative

This configuration is now used when the hardware reset button on the Secure Connector is pressed. For more information, see [How to Reset a Secure Connector](#).

