

How to Update the Firmware

<https://campus.barracuda.com/doc/5799986/>

Applying a new firmware version results in a short service outage.

The **Firmware Update** page allows you to manually update the firmware version of the system or revert to a previous version. You should only revert to an old firmware version if your recently downloaded new version causes unexpected problems. Always [contact Barracuda Networks Technical Support](#) before reverting to a previous firmware version.

Do not manually power-cycle the Barracuda Link Balancer at any time during the update process because it can cause firmware corruption.

Update the Firmware

1. Log into the Barracuda Link Balancer web interface.
2. Go to the **ADVANCED > Firmware Update** page. A newer firmware version is available if the **Download Now** button is enabled.
3. Click **Download Now**. Update the download progress displayed by the bar at any time by clicking **Refresh**.
4. To update the firmware, click **Apply Now**.

Revert the Firmware

To revert the Barracuda Link Balancer to a previous version,

1. Log into the Barracuda Link Balancer web interface.
2. Go to the **ADVANCED > Firmware Update** page.
3. Click **Revert** next to the desired firmware version.

© Barracuda Networks Inc., 2020 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.