

How to Reset a Secure Connector

<https://campus.barracuda.com/doc/73718920/>

If required, you can reset the configuration on your Secure Connector to the fallback configuration via either the hardware reset button or the Secure Connector web interface. The fallback configuration is set in the Control Center. If no fallback configuration is set, or if the the configuration is determined to be invalid the factory default configuration is used. The configuration is activated immediately.

Before You Begin

Set a fallback configuration for the Secure Connector. For more information, see [How to set a Fallback Configuration](#).


Reset the Configuration via Hardware Button

1. Power on your Secure Connector and wait for Secure Connector to boot.
2. Press the **RST** button for 10 seconds.
3. The configuration is now reset and activated.

Reset via Web Interface

1. Log in to the web interface.
2. Go to **CONFIGURATION > Administration**.
3. Click **Retrieve Lock**.
4. Click **Config Reset**.

Administration ?

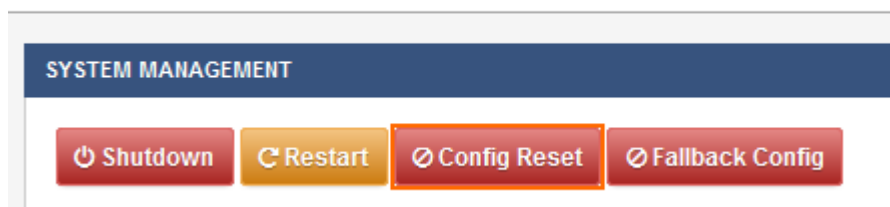

Figures

1. sc_config_reset.png

© Barracuda Networks Inc., 2020 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.