

ktinactrl

<https://campus.barracuda.com/doc/73719753/>

Use the *ktinactrl* command to manage and configure VPN (TINA) tunnel traffic.

Options

You can use the following options with the *ktinactrl* command:

start

Loads the ktina module.

stop

Stops the ktina module. Also shuts down tunnels and personal networks.

tunnel

Opens the directory for tunnel operations. You can use the following commands with *ktinactrl tunnel*:

Command	Description
<i>show</i>	Displays the tunnel details for all VPN tunnels that are configured on the Barracuda CloudGen Firewall.
<i>new</i>	Creates a new VPN tunnel with the specified name.
<i>delete tunnel-name ></i>	Deletes the specified VPN tunnel.
<i>flush</i>	Terminates all tunnels and flushes the cache.

transport

Command	Description
<i>show</i>	Displays the orphaned transport count.
<i>new</i>	Creates a new transport with the specified name.
<i>status value</i>	Displays all status value settings for the tunnel transport.
<i>rate</i>	Displays the transport rate according to the VPN Interface Index.

<i>setrate</i> NAME ID policy(0,1,2) <i>guess</i> (KBs) <i>min</i> (KBs) <i>top</i> (%) <i>bot</i> (%)	Specifies the transport rate for the VPN tunnel.
<i>window</i> size	Specifies the window size.
<i>hc</i> set	Displays all status value settings for the tunnel compression. Use this command to enable or disable high compression and specify compression settings.
<i>hc</i> param	Sets the parameters for high compression if enabled.
[<i>hb</i> idle <i>hb</i> trys <i>hb</i> timeout] NAME ID VALUE	Displays heartbeat idle, tries, and timeout of the specified VPN transport.
<i>shaping</i> NAME ID VALUE	Displays all shaping settings for the tunnel transport.

spi

Command	Description
<i>show</i>	Displays the orphaned SPI count.
<i>new</i> NAME	Renews the SPI count for a specified tunnel.

route

Command	Description
<i>show</i>	Displays all routing entries created by the VPN service.
<i>new</i>	Refreshes the routing table for the specified tunnel.
<i>show</i> / <i>wc</i> -/	Checks the maximum number of possible routing entries. By default, the maximum number of entries for one routing table is 10,000.

lookup

Command	Description
<i>in</i>	Performs a routing lookup and shows inbound traffic details.
<i>out</i>	Displays outbound traffic details.

meth

Command	Description
<i>show</i>	Displays all available encryption methods (cipher, esp, hash, compress).
<i>hash</i> <input type="text"/>	Allows setting the hashing algorithm using SHA-256 and SHA- 512.
<i>crypt</i> <input type="text"/> [output filename]	Specifies the settings for file encryption.

<code>esp [filename] [output filename]</code>	Specifies the settings for esp encryption.
<code>decrypt [filename] [output filename]</code>	Decrypts the specified file.
<code>hash</code>	Specifies the settings for hash encryption.
<code>comp [stream]</code>	Compresses a specified file.
<code>perf [junk=] all </code>	Calculates the possible VPN throughput for each cipher set depending on the hardware.

udp

Command	Description
<code>get</code>	Displays the configured UDP ports.
<code>set address:port[,address2:port2[,addressn:portn]]</code>	Specifies the settings for UDP.

cache

Command	Description
<code>get</code>	Displays information about the cache.
<code>set address:port[,address2:port2[,addressn:portn]]</code>	Specifies cache control settings.

personal

Command	Description
<code>show</code>	Displays personal networks if configured.
<code>add NET [NET ...]</code>	Adds the specified personal networks.
<code>del NET [NET ...]</code>	Deletes the specified personal networks.
<code>used</code>	Displays personal network addresses that have been used.
<code>last</code>	Displays the last address that was used.
<code>flush</code>	Flushes the cache.

reserved

Command	Description
<code>show</code>	Displays all reserved address and networks.
<code>add NET [NET ...]</code>	Adds the specified reserved addresses.
<code>set NET [NET ...]</code>	Sets the specified addresses as reserved.
<code>del NET [NET ...]</code>	Deletes the specified network addresses.
<code>flush</code>	Flushes the cache.

boxrate

Command	Description
<i>get</i>	Gets the box rate limit.
<i>set maxlimit(in bytes)</i>	Sets the box rate limit.

mils

Command	Description
<i>[show]</i>	Allows to use mils specific operations.
<i>show</i>	Shows mils specific operations.

cipher

Command	Description
<i>show</i>	Shows external cipher operations.
<i>load</i>	Loads external operations for selected files and ciphers.
<i>unload</i>	Unloads external operations for selected ciphers.
<i>flush</i>	Flushes the cache.

stream

Command	Description
<i>get</i>	Gets stream compression limits.
<i>set maxlimit(in bytes) udplimit(in percent of maxlimit)</i>	Sets stream compression limits.

cyclemeth

Command	Description
<i>show</i>	Displays transport packet cycle methods.
<i>pkt</i> (set to <i>per packet cycling</i>)	Specifies the settings for the packet archiver.
<i>size SIZE</i> (set to <i>SIZE threshold cycling</i>)	Sets the size for threshold cycling.

wanopt

Command	Description
<i>rules</i>	Shows wanopt rules.
<i>stats</i>	Shows wanopt stats.

tune

Command	Description
<i>deferred get</i>	Displays all tunnel parameter settings.
<i>deferred set 0/1</i>	Specifies tuning parameters settings.

rdev

Command	Description
<i>showt</i>	Displays the routed devices that have been configured.

© Barracuda Networks Inc., 2019 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.