

Dashboard

<https://campus.barracuda.com/doc/84968216/>

The Barracuda Reporting Server includes an interactive Dashboard where you can get an overview of issues in one place.

To view the main Dashboard, navigate to the **BASIC > Dashboard** page.

By default, the information on the Dashboard refreshes automatically every 30 minutes, so you can leave the page up and see recent status.

There are additional Dashboards that correspond to the device type(s) you have connected to the Barracuda Reporting Server.

Select the device type below **BASIC > Dashboard** to see its dashboard.

For details on the various dashboards, refer to [Dashboards Based on Device Type](#).

Main Dashboard

The main dashboard is the same, regardless of the device(s) you have connected to the Barracuda Reporting Server.

System Status

This section indicates the current operational status of the Barracuda Reporting Server.

The following information displays in this section. Note that there are multiple CPU and system fans.

- **Uptime** – How long the Barracuda Reporting Server has been up and running.
- **System Load** – A dynamic representation of the load on the Barracuda Reporting Server.
- **Memory** – Percentage of available Barracuda Reporting Server memory used.
- **CPU Temperature** – The temperature of the CPU within the Barracuda Reporting Server appliance.
- **CPU Fan Speed** – The fan speed of the CPU within the Barracuda Reporting Server appliance, in revolutions per minute (RPMs).
- **System Temperature** – The temperature of the Barracuda Reporting Server appliance.
- **System Fan Speed** – The fan speed of the Barracuda Reporting Server appliance, in

revolutions per minute (RPMs).

Reporting Server Storage

Displays a graph of the hard disk space currently being used to store reporting information. Hover over the gray section of the graph to see space that is still available.

Each connected device appears in a different color. Hover over each color for details on the corresponding connected device.

Subscription Status

Displays the current status of the **Energize Updates**, **Instant Replacement**, and **Premium Support** subscriptions for the Barracuda Reporting Server.

Connected Devices

Lists the current operational status of each of the Barracuda Networks devices linked to the Barracuda Reporting Server, as well as the Barracuda Reporting Server operational status for the logs received and processed for each connected device.

Use the search bar to locate one or more devices with a certain

The Connected Devices table displays this information, sorted by device type:

- **Device Name** – Name of the Barracuda Networks device linked to the Barracuda Reporting Server.
- **Model** – Model number of the linked Barracuda Networks device .
- **Firmware** – Version of the firmware installed on the linked Barracuda Networks device .
- **Status** – Whether the Barracuda Networks device is connected to the Barracuda Reporting Server. You can choose to display devices based on their status, by using the selectors at the top of this section.

Status values are:

- **Connected** – The device is connected and functioning properly.
 - **Disconnected** – The device was intentionally disconnected and was disconnected successfully.
 - **Error** – There is an error with the device connection. The device is not communicating with the Barracuda Reporting Server. For troubleshooting information, refer to [Troubleshooting](#).
- **Last Log Received** – Date and time stamp of the last time a log was passed from the connected Barracuda Networks device to the Barracuda Reporting Server.
 - **Last Log Processed** – Date and time stamp of the last time a log from this device was

processed by the Barracuda Reporting Server.

- **Storage Used** – How much of the available storage on the device has been used.

© Barracuda Networks Inc., 2024 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.