

How to Configure Custom Box Descriptors and Filter Managed Firewalls in Different Data Views

<https://campus.barracuda.com/doc/96026441/>

To configure a CloudGen Firewall, you must give the appliance a name to make it identifiable. Administrators can thereby distinguish it from other computer devices in the network. However, if companies operate at different locations, a single edit field to identify a device is not sufficient.


As of firmware release 8.0.5 (with exception of firmware 8.2.0), the Control Center provides additional information fields you can configure to more clearly identify managed CloudGen Firewalls in multiple networks that relate to the structure of your organization. These freely customizable data fields, called custom box descriptors, can be configured exclusively in the Control Center and can also be written and read via REST.

For multiple Control Centers that are configured to operate in a parent-to-child relation, all configured box descriptor fields are propagated transparently from the parent to all child-related Control Centers.

Before You Begin

Important Considerations for Configuring Custom Box Descriptors

1. Custom box descriptors are an advanced configuration option. In order to use them, you must switch to **Advanced Configuration Mode** at the bottom of the left menu in the display area of the respective configuration window.
2. The configuration of a custom box descriptor provides maximum flexibility for defining a certain set of edit fields to cover an individual use case. Each member of a set contains two components:
 1. Label – The label is needed to classify the custom box descriptor. For example: if you require a custom box descriptor that refers to your headquarters, the name of the label would be HQ.
 2. Extended name.
3. You can configure up to 15 custom box descriptor fields that can later receive any chosen value to extend the standard name of the firewall. These fields are an ordered set ranging from 1 to 15, where edit field 1 is treated with the highest priority and edit field 15 with the lowest, making the first data entry of the list always displayed on top. These edit fields can be found at **your Control Center > CONFIGURATION > Configuration Tree > Multi Range > Global Settings > CC Parameters**.

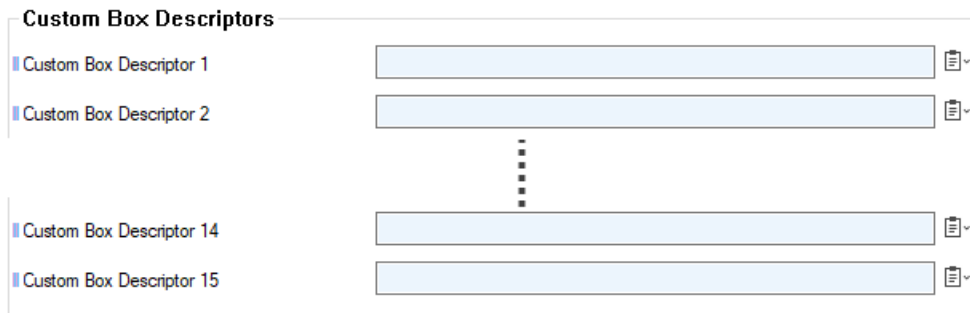

Each string you enter in one of these edit fields represents the label for a custom box descriptor field.

- Each string then maps to an analog position as a label in the configuration section for a custom box descriptor field in the **Properties** node of a managed firewall. If no label for any custom box descriptor is defined, the related user interface area will be empty, as shown by the dotted rectangle below:



Reserved area for custom box descriptors

Because custom box descriptors are configurable only in Control Centers, they will not show up in the **Properties** window when you are logged into the managed firewall.


- After a custom box descriptor is configured, it will show up for every managed firewall in the respective section of the **Properties** node.

It is not possible to configure custom box descriptors individually for different managed firewalls.

- A custom box descriptor field must be configured in two steps, where each step must be executed in a dedicated section of the user interface of the Control Center's configuration tree. The following example is not mandatory. It simply explains one kind of use case.

1. In the first step, you must define the name of the user interface label for a certain descriptor field.

By selecting an appropriate name for a label, you can influence how much the name serves as an implicit, self-explanatory label for creating a hierarchical naming path in terms of a naming tree, e.g., HQ.area1.subarea1.factory1. ... and so forth.

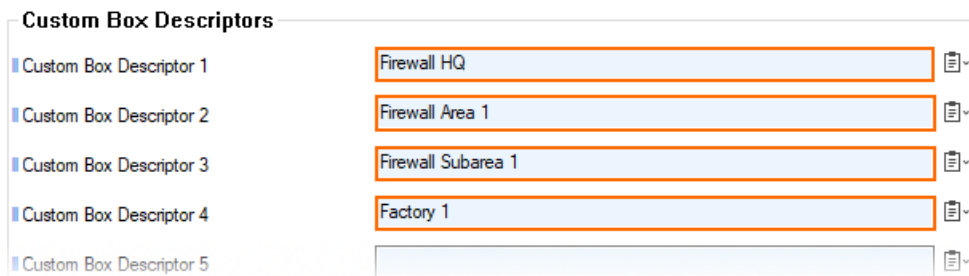


Custom Box Descriptors

| | | |
|-------------------------|--------------------|--|
| Custom Box Descriptor 1 | Firewall HQ | |
| Custom Box Descriptor 2 | Firewall Area 1 | |
| Custom Box Descriptor 3 | Firewall Subarea 1 | |
| Custom Box Descriptor 4 | Factory 1 | |
| Custom Box Descriptor 5 | | |

Note that the maximum length for a custom box descriptor label is 25 characters.

2. In the second step, the associated descriptor field appears in the configuration section of the **Properties** node of a managed firewall with the configured label.

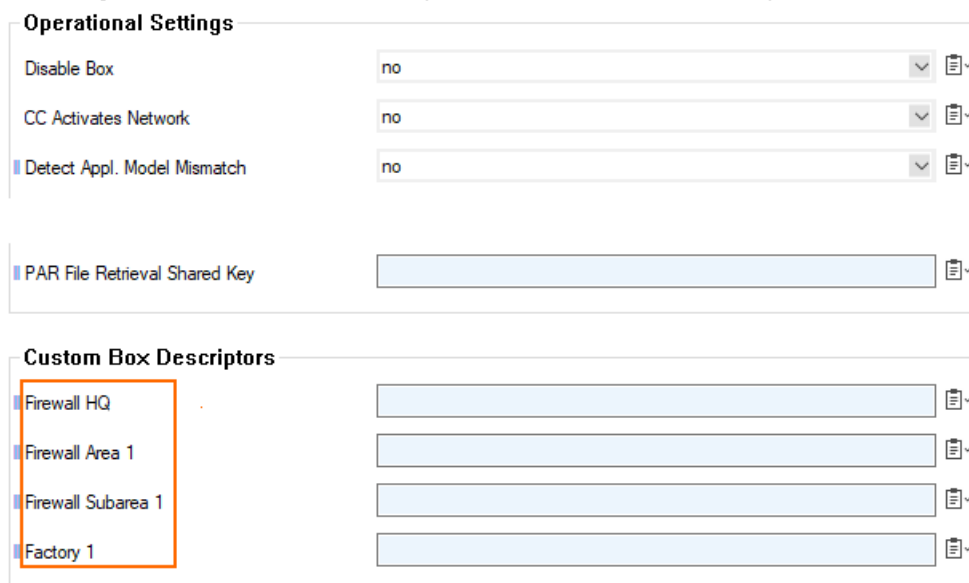

Operational Settings

| | | |
|-----------------------------|----|--|
| Disable Box | no | |
| CC Activates Network | no | |
| Detect Appl. Model Mismatch | no | |

PAR File Retrieval Shared Key

Custom Box Descriptors

| | | |
|--------------------|----------------------|--|
| Firewall HQ | <input type="text"/> | |
| Firewall Area 1 | <input type="text"/> | |
| Firewall Subarea 1 | <input type="text"/> | |
| Factory 1 | <input type="text"/> | |

7. Custom box descriptor fields that have no label defined in **CC Parameters > Custom Box Descriptors** do not appear in the user interface section of the **Properties** node for configured descriptor fields. For example, if you delete the value Firewall Subarea 1 in the list of labels, the list of valid custom box descriptors will display the sequence: Firewall HQ - Firewall Area 1 - Factory 1.

If you delete one label in the chain of descriptor fields, the subsequently filled fields will be moved up in the **Custom Box Descriptors** list of the **Properties** node.

By contrast, if you re-insert a value into an empty edit field, the custom box descriptor field will be (re-)displayed with the new label for the edit field.


In order to avoid confusion and unnecessary configuration time, it is recommended to thoroughly plan the naming scheme before configuring the labels. This is especially necessary if you manage a large number of firewalls at different locations.

8. After making changes to the list of **CC Parameters > Custom Box Descriptors**, you must re-open the Firewall Admin session. That is, you must close and re-open the **Properties** node to see the changes.

How to Configure Custom Box Descriptors

Enter all names for the labels of the required custom box descriptors.

1. Log into the Control Center.
2. Go to **CONFIGURATION > Configuration Tree > Multi Range > Global Settings > CC Parameters > Operational Setup**.
3. Click **Lock**.
4. Enter the required name(s) for the custom box descriptor label(s) into the relevant edit field(s).
5. Click **Send Changes / Activate**.

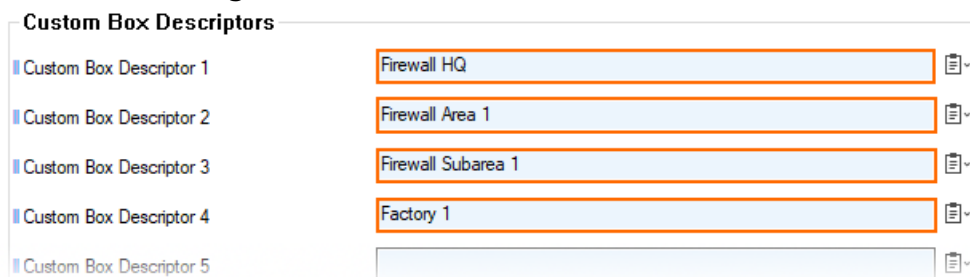

| Custom Box Descriptors | |
|-------------------------|--------------------|
| Custom Box Descriptor 1 | Firewall HQ |
| Custom Box Descriptor 2 | Firewall Area 1 |
| Custom Box Descriptor 3 | Firewall Subarea 1 |
| Custom Box Descriptor 4 | Factory 1 |
| Custom Box Descriptor 5 | |

Assign the extending names to the different classes of your custom box descriptors:

1. Go to **CONFIGURATION > Configuration Tree > Multi Range > Global Settings > your Range > your Cluster > Boxes > your box > Properties > Operational**.
2. Click **Lock**.
3. Assign the required name(s) to the categories of your custom box descriptor labels.
4. Click **Send Changes / Activate**.



| Custom Box Descriptors | |
|------------------------|--------------|
| Firewall HQ | fw_HQ_Europe |
| Firewall Area 1 | fw_A |
| Firewall Subarea 1 | fw_xyz |
| Factory 1 | fw_zone_1 |

Note that the maximum length for a custom box descriptor value is 100 characters.

Filtering Function of Custom Box Descriptors

Custom box descriptors help you to gain a better overview of a large number of managed firewalls. For this reason, custom box descriptors also serve as a filter to let you display only a subset of managed firewalls.

In order to see custom box descriptors as a filter, you must disconnect and then reconnect your session to the Control Center.

A **Custom Box Descriptor** can be used as a filter:

CONTROL

CONFIGURATION

DATABASE

ADMINS

STATISTICS

EVENTS

NETWORK ACCESS CLIENT

Status Map

Zero Touch Deployment

SD-WAN

Configuration Updates

File Updates

Sessions

Barracuda Activation

Pool Licenses

Statistics Collection

Scope: All

State: 0

0

0

0

1

Range

Cluster

HA

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Filter

Name

Description

Access IP

Version

Country

Appliance

Serial

Server

S...

N...

Li...

A...

R...

V...

C...

T...

Firewall HQ

Firewall Area 1

Firewall Subarea 1

Factory 1

Range 1

8.0

VF500

fw_HQ

fw_A

fw_xyz

fw_zone_1

These filters can be used in the following view:

- **CONTROL > Status Map**
- **CONTROL > Configuration Updates**
- **CONTROL > Firmware Updates**
- **CONTROL > Pool Licenses**
- **DATABASE > Box**
- **EVENTS**
- **CONFIGURATION > right worktable > Boxes**

How to Filter for Specific Firewalls

The following instructions refer to the given values above. So let's assume you have already configured several firewalls for multiple regions/countries and want to display all firewalls for the region "Europe".

1. Log into your Control Center.
2. Go to **CONTROL > Status Map**.
3. Locate the column with the name Firewall HQ.
4. Click the cell with the name **Filter** above the name of the column Firewall HQ.
5. Enter fw_HQ_Europe into the filter cell.
6. Now, only firewalls are displayed where the entry applies to the filter value.

CONTROL

CONFIGURATION

DATABASE

ADMINS

STATISTICS

EVENTS

NETWORK ACCESS CLIENT

Status Map

Zero Touch Deployment

SD-WAN

Configuration Updates

File Updates

Sessions

Barracuda Activation

Pool Licenses

Statistics Collection

Scope: All

State: 0

0

0

0

1

Range

Cluster

HA

Filter

| Filter | Filter | Filter | Filter | Filter | Filter | Filter | Filter | ▼ | ▼ | ▼ | ▼ | ▼ | ▼ | ▼ | ▼ | fw_HQ_Europe | Filter | Filter | Filter |
|---------|-------------|-----------|---------|---------|-----------|--------|--------|------|------|-------|------|------|------|------|------|--------------|-----------------|--------------------|-----------|
| Name | Description | Access IP | Version | Country | Appliance | Serial | Server | S... | N... | Li... | A... | R... | V... | C... | T... | Firewall HQ | Firewall Area 1 | Firewall Subarea 1 | Factory 1 |
| Range 1 | | | | | | | | ? | ? | ? | ? | ? | ? | ? | ? | | | | |
| 8.0 | | | | | | | | ? | ? | ? | ? | ? | ? | ? | ? | | | | |
| VF500 | | | | | | | | ? | ? | ? | ? | ? | ? | ? | ? | fw_HQ_Europe | fw_A | fw_xyz | fw_zone_1 |

Figures

1. overview_section_custom_box_descriptors.png
2. operational_settings_with_empty_area_for_custom_box_descriptors.png
3. custom_box_descriptors_labels_defined.png
4. operational_settings_with_filled_area_for_custom_box_descriptors.png
5. custom_box_descriptors_labels_defined.png
6. custom_box_descriptors_data_entered.png
7. custom_box_descriptors_in_cc_status_map.png
8. custom_box_descriptors_in_cc_status_map_filter_active.png

© Barracuda Networks Inc., 2024 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.