

Virtual Server Monitoring

https://campus.barracuda.com/doc/73718970/

To ensure and maintain the connectivity of a virtual server, you can define pools of IP addresses and/or network interfaces that are continuously monitored by the Barracuda CloudGen Firewall. If the health check of a monitored IP address or the link state of a network interface fails, the virtual server is automatically shut down. As soon as the health check target is successful, the virtual server is started again. Monitoring policies define which requirements must be met for the virtual server to remain active, or to be shut down. If you are using an HA cluster, you can use monitoring policies to define the behavior of the secondary HA unit. If necessary, you can use custom scripts which are executed when the virtual server is started or stopped.

Layer 3 Monitoring

The Layer 3 monitoring policy defines the settings for IP address monitoring. The policy configuration provides two address pool tables. Add the target addresses to the tables. These IP addresses must be reachable for the virtual server to stay up. The following Layer 3 monitoring policies are available:

- all-OR-all-present All of the IP addresses from at least one IP address pool, e.g., from the
 Monitored IPs I table, must be reachable. If you enter IP addresses in both the Monitored IPs
 I and II tables, the IP addresses from at least one of these tables must be available. Otherwise,
 the virtual server is deactivated.
- **one-AND-one-present** At least one IP address from each monitoring pool must be reachable. If you only enter IP addresses in the **Monitored IPs I** table, at least one IP address from this table must be available. If you enter IP addresses in both tables, at least one IP address in each table must be available.

The control service runs an ICMP check on all IP addresses in 10-second intervals. If no answer is received, the IP addresses are probed every second for a 10-second period. If no response is received from a valid health check target during the 10-second period, the virtual server shuts down. The server is reactivated as soon as an answer is received for the subsequent probes. If the monitor target is part of a directly attached subnet, ARP responses are monitored too. If the ICMP response fails with presence of a valid ARP entry, the server is still marked as healthy.

Example Setup:

Layer 3 monitoring is configured for the virtual server S2, using both address pools with the following IP addresses and statuses:

Monitored IPs I	Status	Monitored IPs II	Status
10.0.10.110	up	10.0.10.88	up


Virtual Server Monitoring 1/5




10.0.10.68 down 10.0.10.99 do	own
-------------------------------	-----

The status of the virtual server is displayed on **Control > Server** page:

If the monitoring policy **one-AND-one-present** is used, the server stays up because one IP address of each address pool is available.

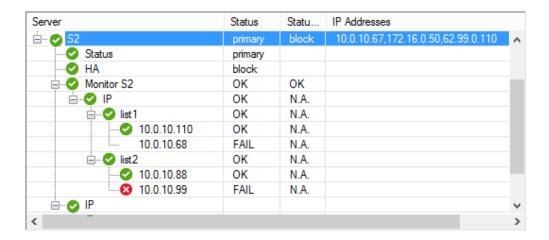

If the **all-OR-all-present** policy is used, the server shuts down because at least no IP pool is fully available.

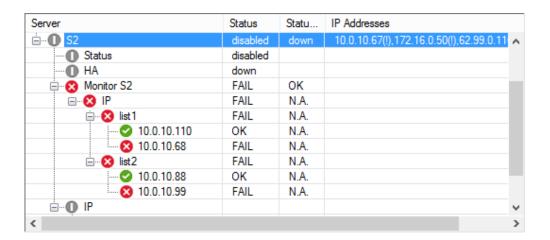

Layer 2 Monitoring

The Layer 2 monitoring policy defines the settings for interface monitoring. Add the interfaces that should be checked according to the policy in the **Monitored Interfaces I** and **II** tables. Layer 2 monitoring is available in the following modes:

• all-OR-all-present - All of the interfaces from at least one interface pool, e.g. from the

<u>Virtual Server Monitoring</u> 2 / 5



Monitored Interfaces I table, must be available.

one-AND-one-present – At least one interface from each interface pool table must be
available. If you have added interfaces in one table, at least one IP address from this table must
be available. If you have added interfaces in both tables, at least one interface from each table
must be available.

The control service checks the link status of each interface on a regular basis. Depending on the selected policy, the server is shut down if the links on the monitored interfaces are unavailable. The server is restarted when the links of the monitored interfaces are up again.

Server Monitoring in High Availability Clusters

If your Barracuda CloudGen Firewall is part of an HA cluster, you can extend the monitoring policy to both units. For HA monitoring, you can select the following options:

- Monitoring on Backup Box If set to No (default), server monitoring on box and HA box is
 processed only by the primary unit. In case of failover, the non-availability of health check
 targets is ignored by the HA box and the server stays up on the secondary unit. If set to Yes,
 the monitoring policy will also be enforced by the backup box. In case of a failover, the virtual
 server is then also deactivated on the second unit if the monitoring also fails on the secondary
 unit.
- **Shared-HA-Probing** Shared HA probing combines the IP address and interface information of both units. Both sets of IP addresses or interfaces must be available on both units. An IP address or interface that is not operational on both HA peers will be excluded from the HA logic decision. If a server is active on a unit and blocked on the peer unit, any probing results will be ignored. The probing decision will only be made if a situation persists over two probing cycles. This gives the system time to account for the delay between detection and synchronization and avoids aliasing effects.
- **Local-HA-Probing** (default) Only local health check target resources are probed. This means every HA partner performs its own monitoring procedure.

Step 1. Configure the Operation Mode

Configure the monitoring policies for IP addresses and interfaces that must be reachable in order for the virtual server to stay up. When your Barracuda CloudGen Firewall unit resides in an HA cluster, specify the monitoring policy for the case of HA failover:

- 1. Go to CONFIGURATION > Configuration Tree > Box > Virtual Servers > your virtual server > Server Properties.
- 2. In the left menu, select **Monitoring Policy**.
- 3. Click Lock.

<u>Virtual Server Monitoring</u> 3 / 5



- 4. From the **Monitoring on Backup Box** list, select whether monitoring should be performed and, in case of failover, adapted by a secondary HA unit.
- 5. Select the **Probing Policy**. For more information, see **Server Monitoring in HA Clusters**.

Step 2. Configure the Monitoring Policy

Specify the monitoring policy for IP addresses and interfaces.

- 1. Go to CONFIGURATION > Configuration Tree > Box > Virtual Servers > your virtual server > Server Properties.
- 2. In the left menu, select **Monitoring Policy**.
- 3. Click Lock.
- 4. In the **Layer 3 Monitoring** section, specify the IP address monitoring policy. For more information, see **Layer 3 Monitoring**.
- 5. In the **Monitored IPs I / II** tables, add the IP addresses that must be reachable via the ICMP protocol by the system that is hosting the server.
- 6. In the **Layer 2 Monitoring** section, specify the interface monitoring policy. For more information, see **Layer 2 Monitoring**.
- 7. In the **Monitored Interfaces I / II** tables, add the physical interfaces that must have a link in order for the server to stay up.
- 8. Click **Send Changes** and **Activate**.

Configure Custom Scripts

Configure custom scripts for use with your monitoring policies. These scripts are run after the server starts or before the server shuts down due to unreachable IP addresses or interfaces.

Do not use phionctrl in your custom scripts; this might cause a deadlock.

- 1. Go to CONFIGURATION > Configuration Tree > Box > Virtual Servers > your virtual server > Server Properties.
- 2. In the left menu, select **Custom Scripts**.
- 3. Click Lock.
- 4. In the **Start** and **Stop Script** fields, enter the commands that should be executed when the server is started up or shut down (7-bit ASCII characters and standard Bash version 2-compliant).
- 5. Click **Send Changes** and **Activate**.

<u>Virtual Server Monitoring</u> 4 / 5

Barracuda CloudGen Firewall



Figures

- 1. pol1.png
- 2. pol2.png

© Barracuda Networks Inc., 2024 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

<u>Virtual Server Monitoring</u> 5 / 5