

7.1.4 Migration Notes

https://campus.barracuda.com/doc/78808204/

Before migrating your Barracuda NextGen Firewall F-Series to 7.1.4, review the requirements and changes listed in the following sections. Some changes applied during the migration might require you to make preparations before the update or extra configurations after the update.

Migration Path to 7.1.4

You can upgrade to firmware 7.1.4 from the following firmware versions:

Current Version	Target Version
	7.1.4
6.0.0 - 6.0.7	Yes
6.1.0 - 6.1.3	Yes
6.2.0 - 6.2.4	Yes
7.0.0 - 7.0.4	Yes
7.1.0 - 7.1.2	Yes
7.1.2 - 7.1.3	Yes

Direct updating from firmware 5.x to 7.1.x is not possible.

For more information, see Migrating from 5.4.x to 6.0.x.

Read the **Release Notes**, especially the **Known Issues** section, for the firmware version that you want to update to.

For more information, see <u>7.1.4 Release Notes</u>.

Review Upgrade Requirements

Verify that your NextGen Firewall F-Series or NextGen Control Center meets the upgrade requirements, and read the release notes for the firmware version.

Supported Models

You can upgrade the following NextGen Firewall F-Series models to 7.1.4:

7.1.4 Migration Notes 1/7



Barracuda NextGen F-Series and Control Center Models					
Hardware Systems F10 Rev B, F12, F15 Rev A/B, F18 Rev A, F80 Rev A, F82 Rev A, F100 Rev F101 Rev B, F180 Rev A, F183 Rev A, F183R Rev A, F200 Rev C, F201 Rev F280 Rev A/B, F300 Rev B, F301 Rev B, F380 Rev A, F400 Rev B, F600 Rev A/B/C, F800 Rev B/C, F900 Rev A/B, F1000 Rev A, C400, C610					
Virtual Systems VF10, VF25, VF50, VF100, VF250, VF500, VF1000, VF2000, VF4000, VF800 VC400, VC610, VC820, VFAC400, VFAC610, VFAC820					
Public Cloud	AWS, Azure, Google Cloud				
Standard Hardware Systems					
Standard Hardware					

Disk Space Requirements

To upgrade a system to version 7.1.4, you must have at least 50 MB of free space in the /boot/ partition and at least 2.1 GB in the / (root) partition. If you are upgrading an F10 Rev B, F100, F100 Rev B, F101, or F101 Rev B, verify that enough disk space is available:

[root@F101:~]# df -h					
Filesystem	Size	Used	Avail	Use%	Mounted on
rootfs	3.8G	1.6G	2.1G	44%	/
/dev/root	3.8G	1.6G	2.1G	44%	/
/dev	470M	32K	470M	1%	/dev
tmpfs	470M	8.0K	470M	1%	/dev/shm
none	188M	16M	173M	9%	/phionflash
cgroup_root	470M	0	470M	0%	/sys/fs/cgroup

To free up disk space, complete the following steps before updating:

- Block the Virus Scanner service.
- Download the <u>Barracuda Cleanup Script for F10, F15, F100 models</u>. Deploy it via <u>remote execution</u> to centrally managed firewalls. Alternatively run the commands manually in the <u>command line interface</u>.

If you still do not have enough free disk space to update your F10 Rev B, F100 or F101, contact Barracuda Networks Technical Support.

Upgrading One Firewall in a High Availability Cluster

If you are upgrading a firewall in a high availability (HA) cluster without upgrading its partner, you must re-synchronize the firewalls:

- 1. Go to FIREWALL > Live > Show Proc.
- 2. Select the **Sync Handler** process and select **Kill Selected**.

7.1.4 Migration Notes 2 / 7



The process is automatically restarted after a couple of seconds, and the primary and secondary firewalls automatically synchronize their sessions.

Barracuda NextGen Admin

After updating a system, you must also download NextGen Admin with the same version. NextGen Admin is backward-compatible. That means you can manage 6.x and 7.x F-Series Firewalls and Control Centers with NextGen Admin 7.1.4.

Always use the latest version of Barracuda NextGen Admin.

You can download NextGen Admin 7.1.4 at the download portal, Barracuda NextGen Admin.

Migration Instructions for 7.1.4

When upgrading according to the migration path above, you must complete the migration steps listed below:

First-Generation ATP to Second-Generation Barracuda ATP Cloud Migration

As of January 31, 2019, the first-generation ATP cloud services used by default with firmware versions 6.2.x, 7.0.x, 7.1.0, 7.1.1, and 7.2.0 will be discontinued. Firewalls using ATP must switch to the second-generation ATP cloud service, which is known as Barracuda Advanced Threat Protection (BATP).

The following table gives an overview of the options you have when you run a special firmware version:

Product	Your Current Firmware Version	Migrating Option
Stand-alone Box or Manged Box	6.x 7.0.x	Firmware 7.0.x is end-of-support in December 2018! Update to the latest 7.1.x or 7.2.x releases, which are using BATP, without the need for further changes. For more information, see How to Install Updates via NextGen Admin on <u>campus.barracuda.com</u> .

7.1.4 Migration Notes 3 / 7



Stand-alone Box	7.1.0, 7.1.1, 7.2.0	Update to the latest 7.1.x or 7.2.x releases, which are using BATP, without the need for further changes. For more information, see How to Install Updates via NextGen Admin on <i>campus.barracuda.com</i> . If you cannot update your standalone box(es) to the latest releases, you can also migrate manually. For more information, see How to Migrate Boxes with 7.1.0, 7.1.1 and 7.2.0 to BATP below.
Control Center with Managed Box	CC: 7.1.0, 7.1.1, 7.2.0 and Box: 7.1.0, 7.1.1, 7.2.0	Update your managed boxes via the Control Center to the latest firmware release. For more information, see How to Update Control Center-Managed Standalone CloudGen Firewalls . If you cannot update your managed box(es) to the latest releases, you can also migrate manually. For more information, see How to Migrate Boxes with 7.1.0, 7.1.1 and 7.2.0 to BATP below.
Control Center with Managed Box	CC: 7.1.2, 7.2.1 or newer and Box: 7.1.0, 7.1.1, 7.2.0	If you cannot update your managed box(es) to the latest release, contact the Barracuda Networks Support Team.
Stand-alone Box Managed Box	7.1.2 or newer 7.2.1 or newer	These firmware versions already support BATP. No changes are necessary.

How to Migrate Boxes with 7.1.0, 7.1.1, and 7.2.0 to BATP

Step 1. Enable Expert Settings in Barracuda Firewall Admin

For more information, see <u>Barracuda Firewall Admin Settings</u>.

Step 2. Enable the BATP Cloud service


Enabling BATP cloud service disconnects your firewall from the first-generation ATP service and connects it to the second-generation Barracuda ATP Cloud.

- 1. Log into your firewall.
- 2. Go to CONFIGURATION > Configuration Tree > your virtual server > Assigned Services > AV (Virus Scanner) > Virus Scanner Settings.
- 3. In the left menu, click **ATP**.
- 4. Click Lock.
- 5. In the ATP Cloud Communication section, select the check box Enable BATP Cloud.

7.1.4 Migration Notes 4 / 7

Barracuda CloudGen Firewall



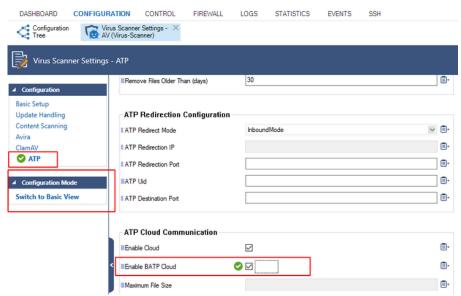

- 6. Click Send Changes.
- 7. Click Activate.

Your firewall now is connected to the second-generation Barracuda ATP Cloud service.

SSL VPN, NAC, and SSL VPN Authentication

SSL VPN Authentication and NAC are automatically migrated into the Default Access Control Policy.

For more information see <u>How to Configure Access Control Policies for Multi-Factor and Multi-Policy</u> Authentication.

ECDSA SSH Key

Depending on the cipher preferred by the SSH client, you may be prompted to accept the new ECSDA key.



Migration for Applications using the SCADA Application Object

Existing application rules using the SCADA application object are automatically migrated to the SCADA (legacy) application object. To use the new SCADA protocol support, the new application

7.1.4 Migration Notes 5 / 7

Barracuda CloudGen Firewall



objects must be selected.

For more information, see <u>How to Configure Application Rules Matching SCADA Protocols</u>.

Start the Update

You can now update the NextGen Firewall F or NextGen Control Center.

For more information, see <u>Updating F-Series Firewalls and Control Centers</u>.

7.1.4 Migration Notes 6 / 7

Barracuda CloudGen Firewall



Figures

- 1. flash free disk space.png
- 2. migrate_to_batp_enable_batp_cloud.png
- 3. authentication_check.png

© Barracuda Networks Inc., 2024 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

7.1.4 Migration Notes 7 / 7