

---

## CONFIGURATION Tab

<https://campus.barracuda.com/doc/43846926/>

The **CONFIGURATION** tab contains all configuration pages for your Barracuda NG Firewall. You can open the **Configuration** page in the following modes:

- **Simple Configuration** – Configuring standalone systems may be simpler in this mode. Links to configuration pages are grouped more logically for single-system administration. (This mode is not available on the Barracuda NG Control Center.)
- **Full Configuration / Configuration Tree** – This mode displays all configuration pages in a hierarchical tree. Use this mode if you have to change more advanced system configurations, such as Traffic Shaping etc.

### In this article:

## Simple Configuration Mode

---

On the Barracuda NG Firewall, the **Configuration** page first opens in Simple Configuration mode when you click the **CONFIGURATION** tab.

10.0.91.63 HQ-VF50-Single × 10.0.91.77 ngcc-00130000001pR...

DASHBOARD **CONFIGURATION** CONTROL FIREWALL VPN MAILGW PROXY WIFI LOGS STATISTICS EVENTS

Full Configuration State Info Activate

### Configuration Overview

#### Device Configuration

- IP Configuration
- System
- Authentication
- Licenses

#### Operational Configuration

- Firewall
  - Ruleset
  - Settings
- VPN
  - [ Create ]
  - Site to Site
  - Remote Access
  - NAC Policy
  - Settings
- Web Security
  - HTTP Proxy
  - URL Filter
  - Virus-Scanner

#### Extended Configuration

- Infrastructure
  - DHCP
  - DNS
  - OSPF/RIP/BGP
  - SNMP
- Content
  - FTP Gateway
  - SSH Proxy
  - Mail Gateway
  - HTTPS Proxy


In Simple Configuration mode, links to configuration pages are organized in the following sections:

- **Device Configuration** – This section provides links to the following main configuration pages of the Barracuda NG Firewall:
  - **IP Configuration** – On this page, configure network settings such as **Management IP (MIP)**, **Network** settings, and **Routing**.
  - **System** – On this page, configure system access, DNS, and proxy settings.
  - **Authentication** – On this page, configure authentication schemes, define special user groups, and configure logging settings.
  - **Licenses** – On this page, manage your system licenses.
- **Operational Configuration** – This section provides links to the configuration pages for virtual services that you have introduced on the Barracuda NG Firewall. For example:

- **Firewall** – The **Firewall** section provides links to the configuration pages for the forwarding rule set and firewall forwarding settings.
- **VPN** – The **VPN** section contains links to the configuration pages for the Client-to-Site VPN, Site-to-Site VPN, remote access, and VPN groups and policies.
- **Extended Configuration** – This section provides links to configuration pages for infrastructure such as DHCP, DNS, and OSPF/RIP/BGP settings. The section also provides links to any configured gateways and proxies, such as the FTP Gateway or SSH Proxy services.

## Full Configuration Mode

The Full Configuration mode provides advanced access to all configuration areas of the Barracuda NG Firewall or Barracuda NG Control Center. To access this mode, click **Configuration Tree** under the **CONFIGURATION** tab.

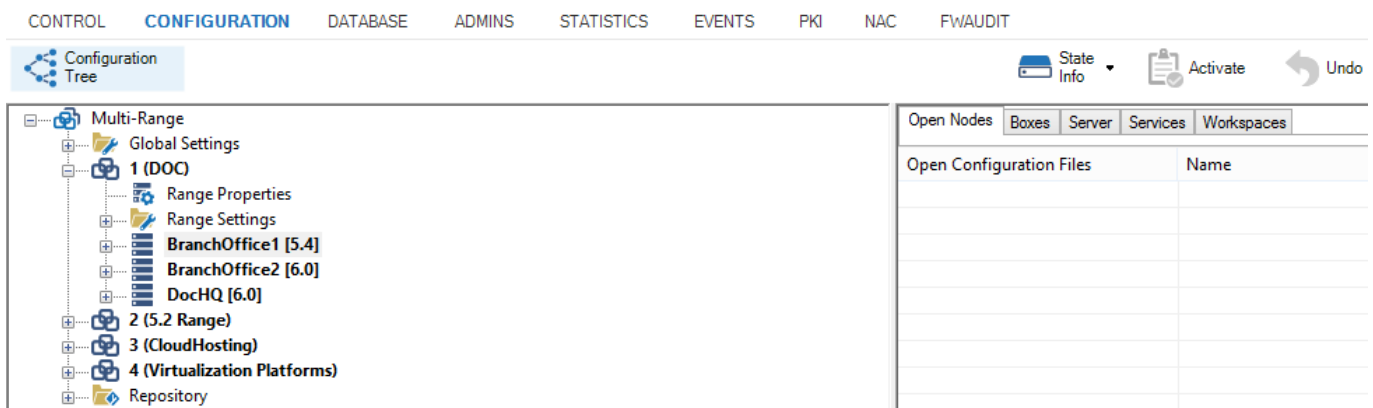

In Full Configuration mode, the Configuration page provides the following sections:

- **Configuration Tree** – The Configuration Tree lists all of the configuration pages for your system in a hierarchical order. To access the subpages of a configuration section, click + (expand). To open a configuration page, double-click its node. On the Barracuda NG Firewall, the **Box** object is the highest node in the hierarchy of the **Configuration Tree** and contains all configuration objects, such as **Box Properties**, **Virtual Servers**, and **Services**. On the Barracuda NG Control Center, the **Multi-Range** object is the highest node. Expand **Multi-Range** to access all **Ranges**, **Clusters**, and **Boxes**.
- **Quick File Access** – On the Barracuda NG Control Center, the **Configuration** page provides an additional section in the right pane where configuration nodes are listed under tabs for quick access. From this section, you can select configuration files by boxes, servers, and services. To quickly locate a configuration node, open the respective tab and double-click it in the list.

## Configuration Tree Controls

From the Configuration Tree, you can manage your configurations and administrative sessions. You can also identify which nodes have been modified. When you right-click the nodes of the Configuration Tree, you are provided with options to manage your systems, virtual servers, services, and administrative sessions. The following table lists some of the available options:

- **Collapse All** – Closes all open nodes in the Configuration Tree down to the top level.
- **Properties** – Opens a window that displays the properties of the configuration node. This option is available only on the Barracuda NG Control Center.
- **Lock** – Locks write access to the selected node or tree branch. A lock icon is then displayed next to the node or branch. This lets other administrators know that the page has been locked for editing. If a page has been locked by you, a yellow lock is displayed next to it. If a page is locked by another administrator, a gray lock is displayed next to it. Selecting **Show Lock Info** from the context menu displays the information about the administrator who has locked the selected node or tree branch. **Break Lock** breaks the lock held by another administrator on the selected node or tree branch. **Unlock** releases write access to the configuration page. It is recommended that you unlock all configuration files before quitting a session or starting another task.

To prevent administrators from overwriting each other's changes, you can only break locks that belong to broken sessions that are older than 10 minutes. An active session is broken when the associated client is suddenly disconnected and cannot successfully reconnect. You cannot break locks held in active sessions. However, if you have the appropriate permissions, you can kill sessions that own the lock.

When you kill a session, you are forcing an undo on the database. The administrator who owns the killed session will lose all configuration changes that have not yet been activated.

- **Copy To Repository** – Copies the selected configuration page to the corresponding repository section. This option is only available after you create a repository.
- **Refresh From Here** – Updates the view of the Configuration Tree from the selected node.
- **Show RCS Versions** – This option is only available on the Barracuda NG Control Center. It displays Revision Control System (RCS) information for the selected nodes. For more information, see [Revision Control System \(RCS\)](#).
- **Show History** – Displays a history of the locks that have been made to the selected node.
- **Show Backlinks** – Shows references to other objects if available. This option is available only on the Barracuda NG Control Center.
- **Show Backlink Overrides** – Displays overrides if backlinks are present. This option is available only on the Barracuda NG Control Center.
- **Show Config Definition** – Opens a window displaying the details of this configuration node. This option is available only on the Barracuda NG Control Center.
- **Remember Position / Clear Position** – If you want Barracuda NG Admin to open at a specific node for your next session, right-click the node and select **Remember Position**. To clear the saved position, right-click it and select **Clear Remember Position**.

The following options are only available when you right-click the **Box** node:

- **Create DHA box** - (This option is only available on standalone units.) Creates a secondary or Dedicated High Availability (DHA) unit for an HA setup. You can only create one HA partner for each box. For more information, see [High Availability](#). When you create the DHA unit, the **HA Box** and **HA Network** nodes are created at the bottom of the Configuration Tree. On the **HA Network** page, you can configure the network settings for the DHA unit. The configuration itself is the same as the regular network configuration.

When you initially create the HA box, the network settings of the primary unit are automatically used in the **HA network** settings. Before installing the DHA unit, verify that the correct IP addresses have been added to the **HA Network** settings.

- **Remove DHA box** - Deletes the DHA unit.
- **Emergency Override** - This option is only available on Barracuda NG Firewalls that are administered by a Barracuda NG Control Center. It allows local configuration of the Barracuda NG Firewall.

After making your local changes, you must also manually synchronize configurations with the Barracuda NG Control Center.

- **Refresh Complete Tree** - Updates the view of the Configuration Tree.
- **Collapse** - Collapses all nodes in the selected tree branch.
- **Expand** - Opens all nodes in the selected tree branch.
- **Create Repository** - Creates a repository of configurations. For more information, see [Repositories](#).
- **Create PAR file** - Creates a PAR file to back up your system configuration. For more information, see [Backups and Recovery](#).
- **Restore from PAR file** - Restores the configuration of your system from a PAR file. For more information, see [Backups and Recovery](#).

The following options are only available when you right-click the **Virtual Servers** node:




- **Create Server** - Creates a virtual server. For more information, see [Virtual Servers and Services](#).
- **Remove Server** - Marks the selected server for deletion.

The following options are only available when you right-click the **Assigned Services** node:

- **Create Service** - Creates a service. For more information, see [Virtual Servers and Services](#).
- **Remove Service** - Marks the selected service for deletion.

## Identifying Modified Nodes


From the Configuration Tree, you can quickly determine if a node has been modified if one of the following icons is displayed next to it:

Icon	Description
	The node has just been added. You will see this icon next to servers, services, and DHA units that you have added.
	The node has been modified. You will see this icon next to configuration pages whose settings have been edited.
	The node has been marked for deletion. You will see this icon next to servers and services that you have selected for removal.

The modified nodes are added, applied, or deleted after you activate your configuration changes.

## Configuration Page Controls

When accessing a configuration page from the Configuration Tree by double-clicking, you can find the following options for editing the settings and applying configuration changes to the system:

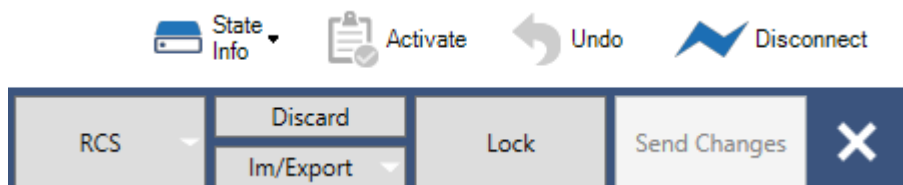

- **Lock** - Because multiple administrators can access a configuration page, you must always lock it before you can edit the settings. **Lock** locks the configuration page to give you write access and changes the status of the button to **Unlock**. **Unlock** unlocks the configuration page.
- **Send Changes** - After editing your settings, you must send them to the Barracuda NG Firewall or Control Center by clicking **Send Changes**. When the configuration changes were successfully sent, an **Activation Pending** link is displayed at the top.
- **Discard** - This option allows you to discard the changes after they were sent.
- **Activate** - To apply the configuration to the Barracuda NG Firewall after editing it and sending the changes, click **Activate**. (In case the **Activation Pending** link is displayed, click this link instead.)

The **State Info** dropdown menu provides information about all sessions and transactions on the system and offers controls to manage HA synchronization.

- **Transactions** - To view configurations that are pending activation, expand **State Info** and select **Transactions**.
- **Locks** - To gather information about all locked elements in the configuration, select **Locks**.
- **Sessions** - The service bar of the Configuration page displays your Generic Configuration Session ID (GCSID). The GCSID contains the IP address and source port of the connecting client followed by the PID of the server process (boxconfigd) that is handling the current connection. When clicking Sessions, you can also view information about the sessions of other

administrators. To terminate or gather more information about a session, select it in the appearing **Configuration Sessions** window and then click one of the following buttons:

- **Show Locks** - Displays a list of the nodes that are locked by the administrator.
- **Show Transactions** - Displays a list of the configuration changes that are waiting for activation.
- **Kill Session** - Kills the session. However, it is strongly recommended that you do not kill sessions held by other administrators.
- **HA Sync** opens the **HA Box Synchronization** window with information about your HA units and controls to manage HA synchronization. For more information on these functions, see [High Availability](#).

On a configuration page, you will also find controls for the following tasks:

- **Im/Export** - With this dropdown option, you can export your settings to the clipboard and import them to the configuration of another system:
  - **Copy to Clipboard** - Exports your configurations to the clipboard.
  - **Replace With Clipboard** - Replaces the settings on the page with values that were copied to the clipboard.
  - **Merge With Clipboard** - Merges the settings of the page with values that were copied to the clipboard.
- **RCS** - The **RCS** dropdown menu lets you access information about configuration changes that were applied to your Barracuda NG Firewall units. For more information, see [Revision Control System \(RCS\)](#).

## Figures

1. config\_tab.png
2. conf\_tree.png
3. NewNode.PNG
4. ModifiedNode.PNG
5. DeletedNode.PNG
6. conf\_menu.png

© Barracuda Networks Inc., 2019 The information contained within this document is confidential and proprietary to Barracuda Networks Inc. No portion of this document may be copied, distributed, publicized or used for other than internal documentary purposes without the written consent of an official representative of Barracuda Networks Inc. All specifications are subject to change without notice. Barracuda Networks Inc. assumes no responsibility for any inaccuracies in this document. Barracuda Networks Inc. reserves the right to change, modify, transfer, or otherwise revise this publication without notice.